

Work Order ID 101609

May-13-13 1:09:53 PM

101609

SHIP DATE
27 also work
Page 1

Item ID: D350-567-141

Accept

N900040100

Setup Start *NS1*

Revision ID:

Stop *NS2*

Item Name: Floor Window Closeout Installation

Start Date: 5/13/13 Start Qty: 2.00

2

Cust Item ID:

Required Date: 5/31/13 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals: Process Plan: MLJ Date: 13-05-15 Tooling:

Date:

Run Start *NR1*

QC: Date: SPC (Y/N):

Date:

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

DSI 9590

C

JB

0.00

100

100

DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile & type labels per PPP D350-567-141 CHG002

27
B-627

2

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging

2

13-06-1987

82

120

QC4- 100% Inspect kits for completeness

0.00

120

QC

Memo

0.00

Quality Control

27
B-627

2

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear	General	Other
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabeled
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized
		<input type="checkbox"/> Over/Under tolerance
		<input type="checkbox"/> Part Incorrect
		<input type="checkbox"/> Part Lost/Missing
		<input type="checkbox"/> Part Moved
		<input type="checkbox"/> Positioned Wrong
		<input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced
		<input type="checkbox"/> Temperature/Cure
		<input type="checkbox"/> Weld
		<input type="checkbox"/> Wrong Stock Pulled
		<input type="checkbox"/> Other

Picklist Print

May-13-13 1:09:52 PM

Page 1

Work Order ID: 101609

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 5/13/13

Required Date: 5/31/13

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP REV:A 11.11.09 new issue DD verf:JLM IPP REV:B 12.01.23 AS PER
ECN12-511 DD VERF:EC IPP REV:C 12.03.05 AS PER ECN12-537 DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3802-1 Window Seal		Manufactured	No			110	f	272.3900	2	4			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST408		272.39							
				56881		0.75							
				81021		2							
				81868		269.64							
D4434-041 Fwd Bracket Assembly		Manufactured	No			110	Each	1.0000	1	2			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST272		1							
				95149		1							
D4434-047 Cover Assembly		Manufactured	No			110	Each	7.0000	1	2			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST273		7							
				95862		7							
D4435-045 T/R Bellcrank Cover Assembly		Manufactured	No			110	Each	8.0000	1	2			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST273		8							
				96412		3							
				96551		5							
D4435-9 Bracket		Manufactured	No			110	Each	0.0000	2	1			
D4436-041 Aft Bracket Assembly		Manufactured	No			110	Each	6.0000	1	2			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				ST272		6							
				101392		6							

1 de 24" per KIT
OK 24"
SW

81868

2

103323

2

75

95862

2

75

96551

2

75

95881

2

75

(-1) 143520H1

101392 14B103322

13-06-19

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear	General	Other
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabelled
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized
		<input type="checkbox"/> Over/Under tolerance
		<input type="checkbox"/> Part Incorrect
		<input type="checkbox"/> Part Lost/Missing
		<input type="checkbox"/> Part Moved
		<input type="checkbox"/> Positioned Wrong
		<input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced
		<input type="checkbox"/> Temperature/Cure
		<input type="checkbox"/> Weld
		<input type="checkbox"/> Wrong Stock Pulled
		<input type="checkbox"/> Other

Picklist Print

May-13-13 1:09:52 PM

Page 2

Work Order ID: 101609

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 5/13/13

Required Date: 5/31/13

Start Qty: 2.00

Required Qty: 2.00

D4441E1 Rubber Seal Manufactured No

110 f 411.4346

2 4 JB

1 de 24" pr K.T

Location

Loc Qty

Loc Code

ST412

411.4346

74760

6.119

79385

0.0476

80763

35.656

86185

369.612

86185

AN3-3A Bolt Purchased No

110 Each 162.0000

7 14 JB

Location

Loc Qty

Loc Code

ST350

162

123831

7

124221

130

124552

25

8X124221

AN525-832R7 Screw Purchased No

110 Each 236.0000

2 4 JB

Location

Loc Qty

Loc Code

ST343

236

120560

236

120560

MS21042L06 Nut Purchased No

110 Each 637.0000

7 14 JB 12-06-19

Location

Loc Qty

Loc Code

ST314

137

124859

137

ST316

500

125303

500

125303

May-13-13 1:09:53 PM

Shop Packet Print

Page 2

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width:100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

FAULT CATEGORY

Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions
---	---	---

<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge	<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other
--	---

Picklist Print

May-13-13 1:09:53 PM

Page 3

Work Order ID: 101609

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 5/13/13

Required Date: 5/31/13

Start Qty: 2.00

Required Qty: 2.00

MS210421008

Nut

Purchased No

110 Each 4,721.0000

2

4

jb

JB

Location

Loc Qty

Loc Code

ST315 2721
122141 3
122452 9
122814 500
123900 2209
ST505 2000
125445 2000

123900

MS210421013

Nut

Purchased No

110 Each 3,977.0000

5

10

jb

JB

Location

Loc Qty

Loc Code

FP001 3
122141 3
GA 18
122452 18
ST314 268
117885 32
119017 55
119075 138
123265 43
ST506 3688
123900 954
124291 2734

124291

MS210591013

Nut Plate

Purchased No

110 Each 367.0000

2

4

jb

13-06-19

Location

Loc Qty

Loc Code

ST316 311
124291 11
125535 300
ST506 56
124308 56

125535

May-13-13 1:09:53 PM

Shop Packet Print

Page 3

NCR: Yes / No •

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____				DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>		AGAINST DEPARTMENT/PROCESS <div style="display: flex; justify-content: space-between;"> <div> Skid-tube <input type="checkbox"/> Machining <input type="checkbox"/> Thermoforming <input type="checkbox"/> Large Fab <input type="checkbox"/> </div> <div> Crosstube <input type="checkbox"/> Small Fab <input type="checkbox"/> Finishing <input type="checkbox"/> Composite <input type="checkbox"/> </div> <div> Water Jet <input type="checkbox"/> Prod. Eng. Coord. <input type="checkbox"/> Rec/Store/Packaging <input type="checkbox"/> Supplier <input type="checkbox"/> </div> <div> Engineering <input type="checkbox"/> Quality <input type="checkbox"/> Other <input type="checkbox"/> </div> </div>					
Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector		
Doc/Data <input type="checkbox"/>											
Equip/Tooling <input type="checkbox"/>											
Operator <input type="checkbox"/>											
Material <input type="checkbox"/>											
Setup <input type="checkbox"/>											
Other <input type="checkbox"/>											
Process <input type="checkbox"/>											
Supplier <input type="checkbox"/>											
Training <input type="checkbox"/>											
Unapproved <input type="checkbox"/>											

FAULT CATEGORY				
Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions	<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge <input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other	

Picklist Print

May-13-13 1:09:53 PM

Page 4

Work Order ID: 101609

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 5/13/13

Required Date: 5/31/13

Start Qty: 2.00

Required Qty: 2.00

MS35206-229

Screw

Purchased No

110 Each 89.0000

7

14

JB

8

Location

Loc Qty

Loc Code

ST288

89

123832

89

123832

NAS1149F0332P

WASHER

Purchased No

110 Each 8,438.0000

12

24

JB

8

Location

Loc Qty

Loc Code

GA

182

122063

182

ST294

158

122063

158

ST295

3

123352

3

st510

8095

123900

8095

123900

NAS1149FN616P

WASHER

Purchased No

110 Each 189.0000

14

28

JB

8

Location

Loc Qty

Loc Code

ST294

189

120560

189

120560

NAS1149FN816P

WASHER

Purchased No

Each 669.0000

2

4

JB

13-06-19

Location

Loc Qty

Loc Code

ST294

669

117316

215

121039

454

121039

May-13-13 1:09:53 PM

Shop Packet Print

Page 4

NCR: Yes / No

WORK ORDER NON-CONFORMANCE / UPDATE

DQA: _____ Date: _____

QA Closed: _____ Date: _____

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data <input type="checkbox"/>									
Equip/Tooling <input type="checkbox"/>									
Operator <input type="checkbox"/>									
Material <input type="checkbox"/>									
Setup <input type="checkbox"/>									
Other <input type="checkbox"/>									
Process <input type="checkbox"/>									
Supplier <input type="checkbox"/>									
Training <input type="checkbox"/>									
Unapproved <input type="checkbox"/>									

FAULT CATEGORY

Landing Gear <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	General <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions
---	---	---

<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge	<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other
--	---

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. D OR EARLIER
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 1 OR EARLIER
REF CANADIAN STC: SH92-18
FAA STC: SH989NE
FAA STC: SH990NE

1.0 Purpose

The purpose of this service instruction is to add the D350-567-141 Close-out Kit, which is intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141 Floor Window Close-out Kit provides a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1.

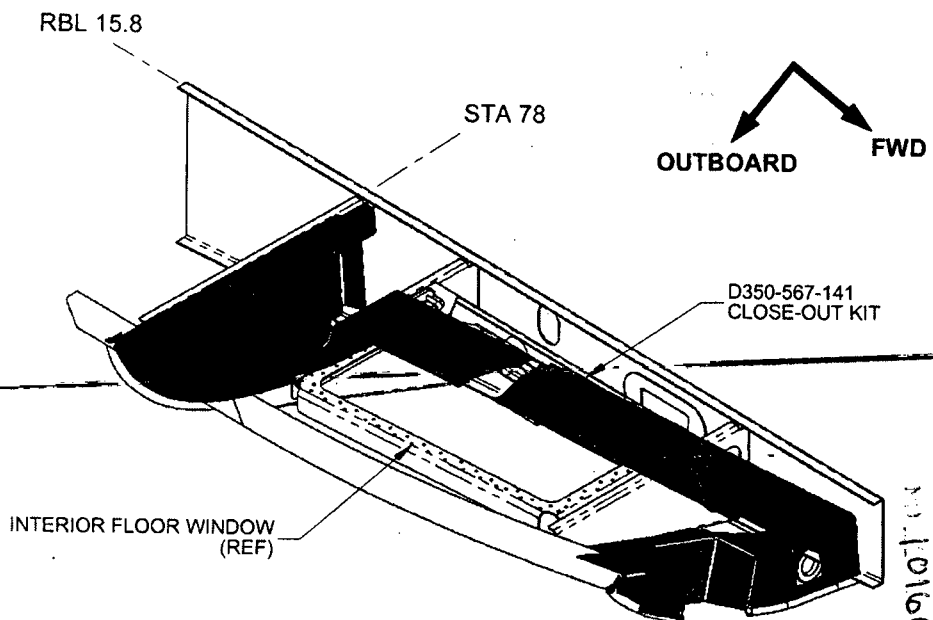


Figure 1. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN616P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 1 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	<small>COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

2.0 Part List

Qty -141	Part Number	Description
X	D350-567-141	FLOOR WINDOW CLOSE-OUT KIT
1	D3802-1-024	SEAL (24")
1	D4434-041	FWD BRACKET ASSEMBLY
1	D4434-047	COVER ASSEMBLY
1	D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	D4435-9	BRACKET
1	D4436-041	AFT BRACKET ASSEMBLY
1	D4441-1-240	RUBBER SEAL (24")
7	AN3-3A	BOLT
2	AN525-832R7	SCREW
7	MS21042L06	NUT (OR MS21042-06)
2	MS21042L08	NUT (OR MS21042-08)
5	MS21042L3	NUT (OR MS21042-3)
2	MS21059L3	NUTPLATE
7	MS35206-229	SCREW
12	NAS1149F0332P	WASHER (AN960-10L)
14	NAS1149FN616P	WASHER (OR AN960-6L)
2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141 Kit.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141 Floor Window Close-out Kit	3.9 lb 1.77 kg	17.9 in 0.45 m	69.8 in-lb 0.80 m-kg	65.5 in 1.66 m	255.5 in-lb 2.94 m-kg

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141 Close-out Kit. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 — OK to remove D3295-041
 - D350-567-031 — OK to remove D3212-1
 - D350-567-011 — OK to remove D2214
 - D350-567-021 — OK to remove D2951
- It is acceptable to drill/trim the D350-567-141 Close-out Kit as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE 12.03.13		COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

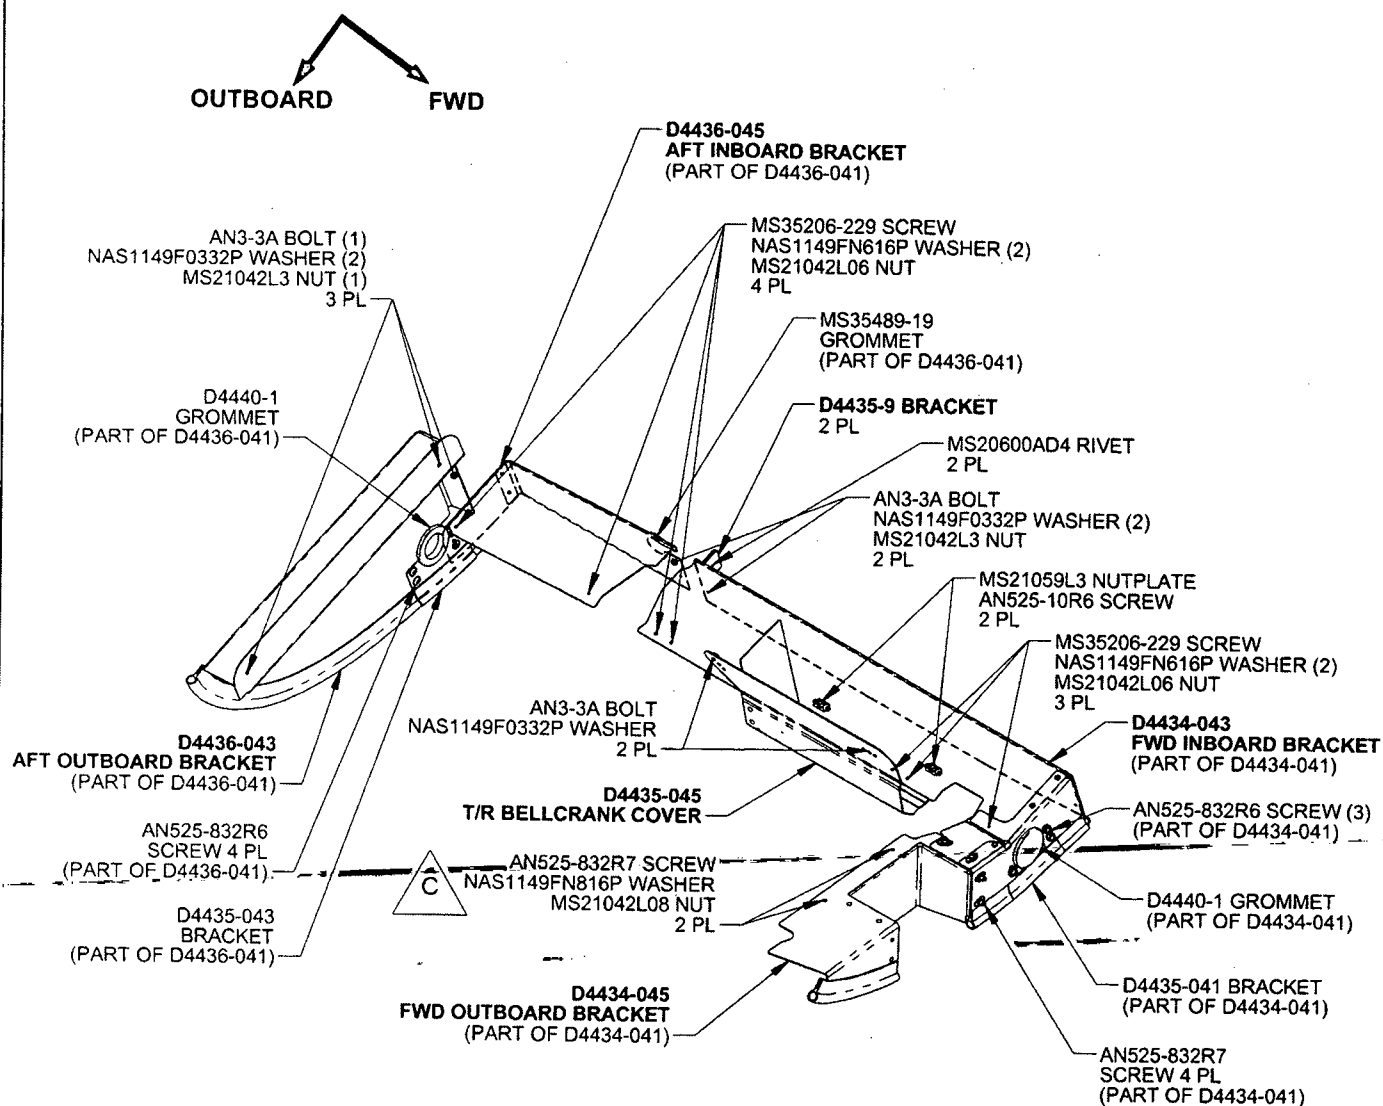


Figure 2. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 3 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

- 4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or clecos clamps. Before drilling holes:
- Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
 - Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.
- 4.2 Temporarily install D4434-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.
- 4.3 If aircraft is equipped with Collective Circuit Breaker Board box trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4434-047 Cover as shown in Figure 13. Note: Confirm the D4434-047 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.
- 4.4 Drill off rivets holding plastic wire bundle stand offs. Transfer drill $\phi 0.144$ holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x $\phi 0.144$ holes to D4434-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x $\phi 0.144$ holes for D4434-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.
- 4.5 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.
- 4.6 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x $\phi 0.129$ holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.
- 4.7 Drill a pilot hole from D4435-9 Bracket to the D4434-045 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to $\phi 0.191$. Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.
- 4.8 Transfer drill 2 x $\phi 0.144$ holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x $\phi 0.144$ holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 Screws, NAS1149FN816P washer and MS21042L08 nuts.
- 4.9 Align D4435-045 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12.
- 4.10 Transfer drill 2 x $\phi 0.098$ holes from D4435-045 T/R Bellcrank Cover to D4434-043 Fwd Inboard Bracket. Open holes to $\phi 0.191$ and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12 and Figure 13. Install D4435-045 T/R Bellcrank Cover using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12 and Figure 13.
- 4.11 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.12 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.13 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.14 Ensure there is a gap between the components of the D350-567-141 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-041 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.



CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

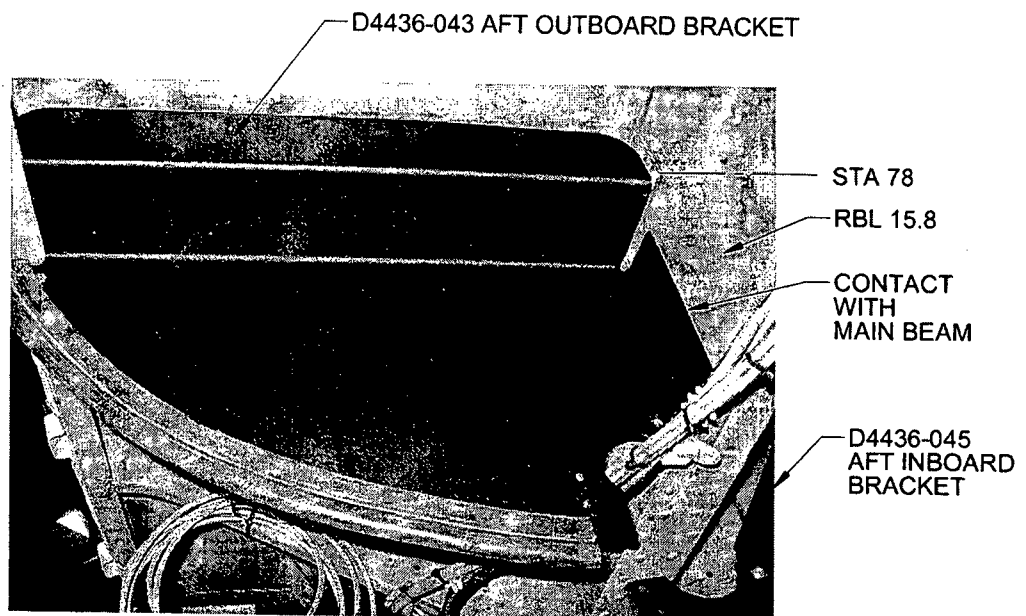


Figure 3. D4436-043 Aft Outboard Bracket Installation

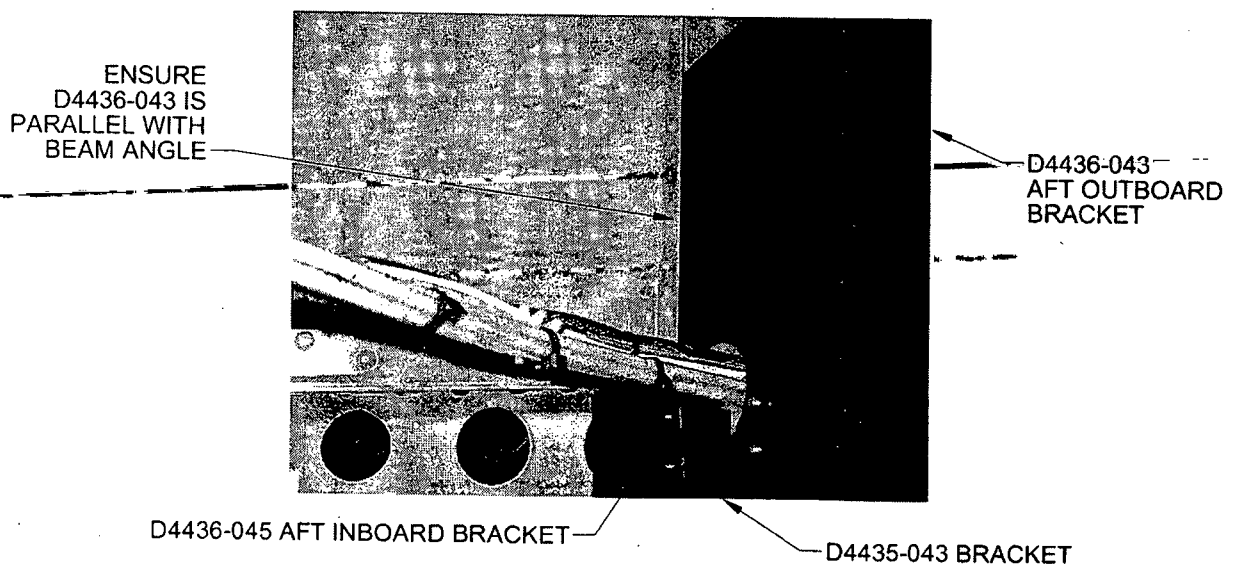


Figure 4. D4436-043 & D4435-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-Q-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A	SHEET 5 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	


101609

D4436-045 AFT INBOARD BRACKET

NO CONTACT WITH GUSSET

D4434-043 FWD INBOARD BRACKET


RBL 15.8

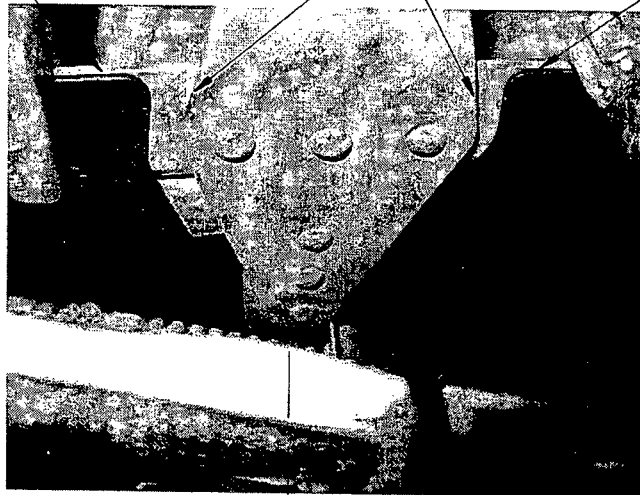

STA 70.5

Figure 5. D4436-045 & D4434-043 Brackets Installation

D4436-043 AFT OUTBOARD BRACKET

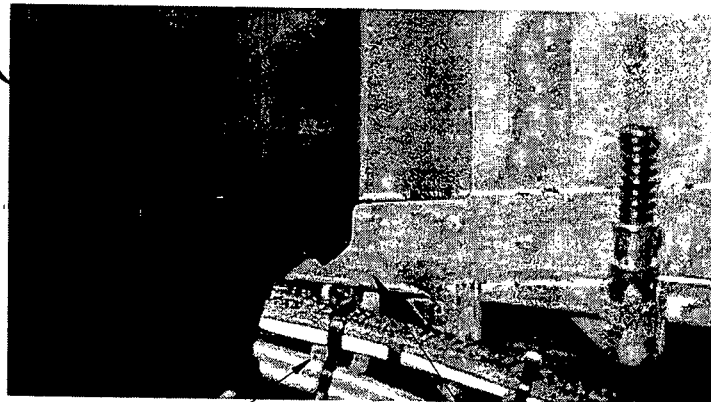

PLASTIC STAND OFF REF

RIVET HOLE FOR PLASTIC STAND OFF

CONFIRM FLUSH WITH OUTBOARD EDGE OF MAIN BEAM FLANGE

D4436-045 AFT INBOARD BRACKET

Figure 6. D4436-043 & D4436-045 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6


DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A		SHEET 6 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

CONFIRM
FLUSH WITH
OUTBOARD
EDGE OF MAIN
BEAM FLANGE

D4436-045
AFT INBOARD
BRACKET

PLASTIC STAND OFF
REF

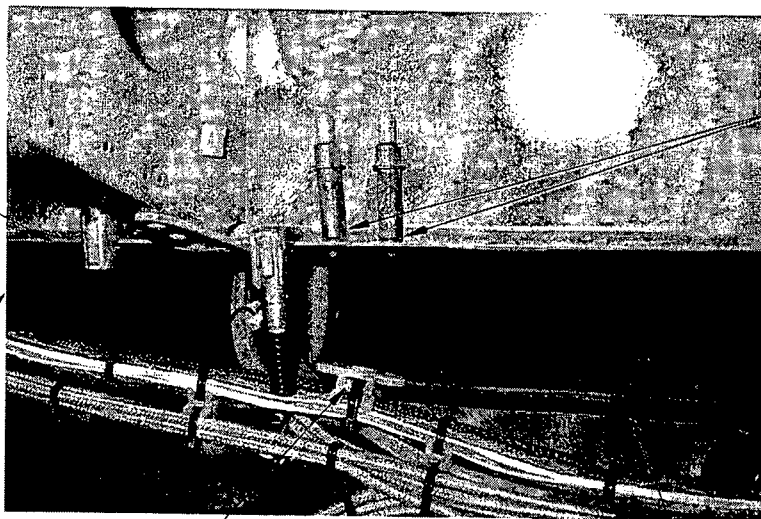


RIVET HOLES
FOR PLASTIC
STAND OFF

--- RBL 15.8

D4434-043 FWD INBOARD
BRACKET

Figure 7. D4434-043 & D4436-045 Brackets Installation

CONFIRM
FLUSH WITH
OUTBOARD
EDGE OF MAIN
BEAM FLANGE

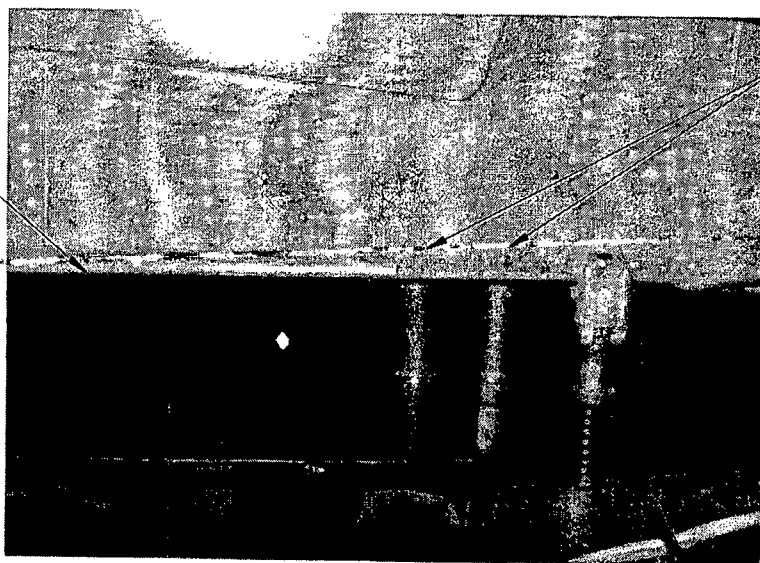

RIVET HOLES
FOR PLASTIC
STAND OFF

--- RBL 15.8

D4434-043 FWD INBOARD
BRACKET

Figure 8. D4434-043 Fwd Inboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A	SHEET 7 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

101609

INSTALL
D4436-043
AFT OUTBOARD BRACKET
USING
AN3-3A BOLT (1)
NAS1149F0332P WASHER (2)
MS21042L3 NUT (1)
3 PL

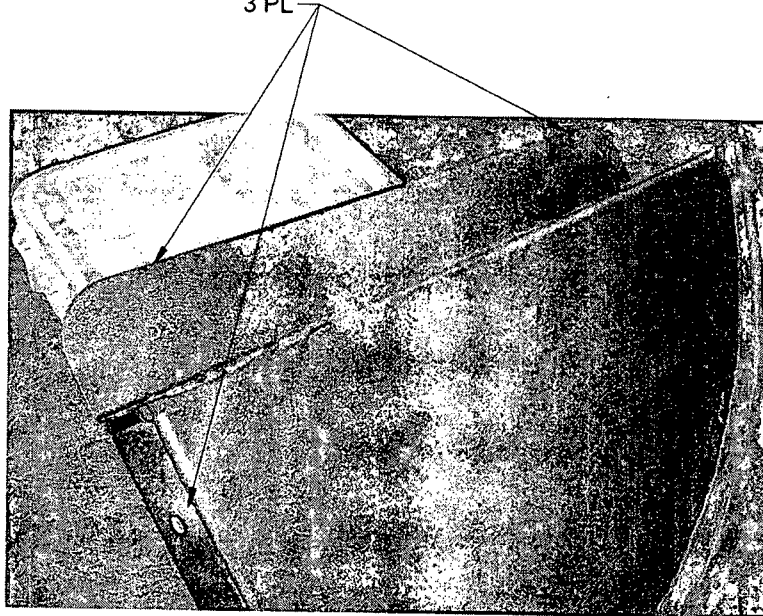


Figure 9. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01


APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA
DRAWN	RF	
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590
MFG. APPR.	N/A	REV. C SHEET 8 OF 12
APPROVED	<i>[Signature]</i>	TITLE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT
DATE	12.03.13	SCALE NTS
<small>COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>		

101609

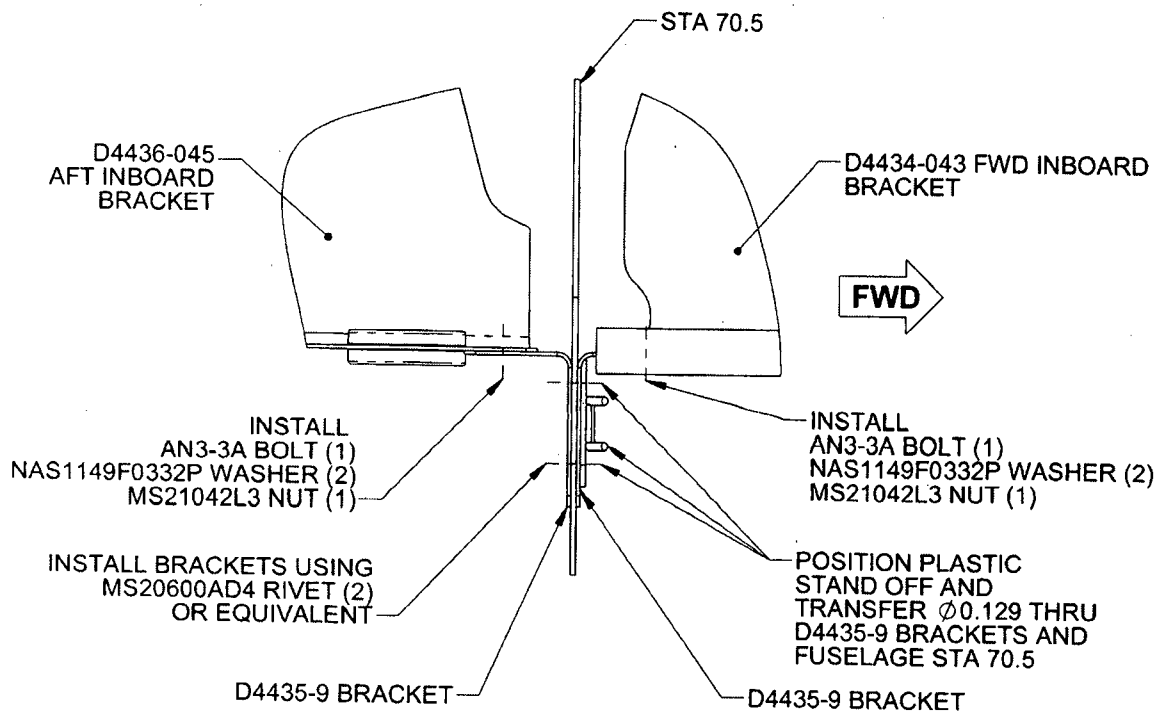

LOOKING UP AT STA 70.5

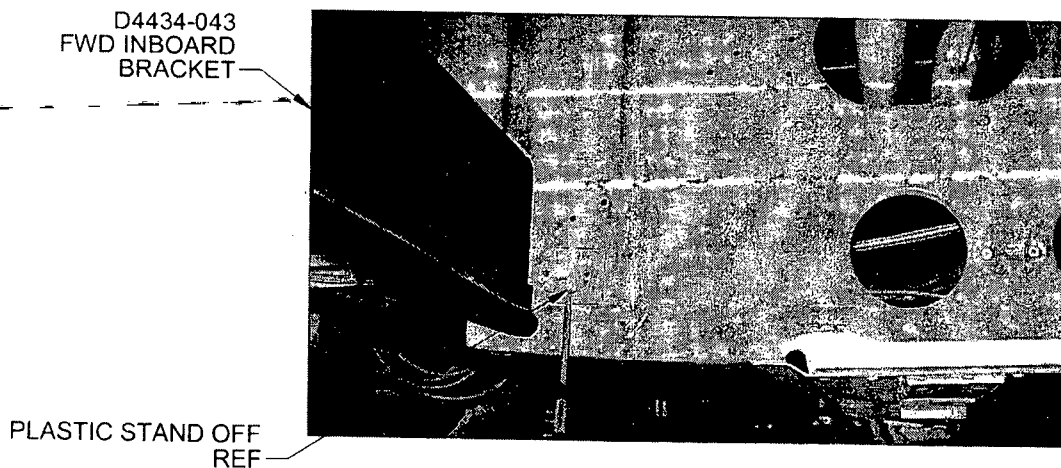


Figure 10. D4434-043 and D4435-9 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A	SHEET 9 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

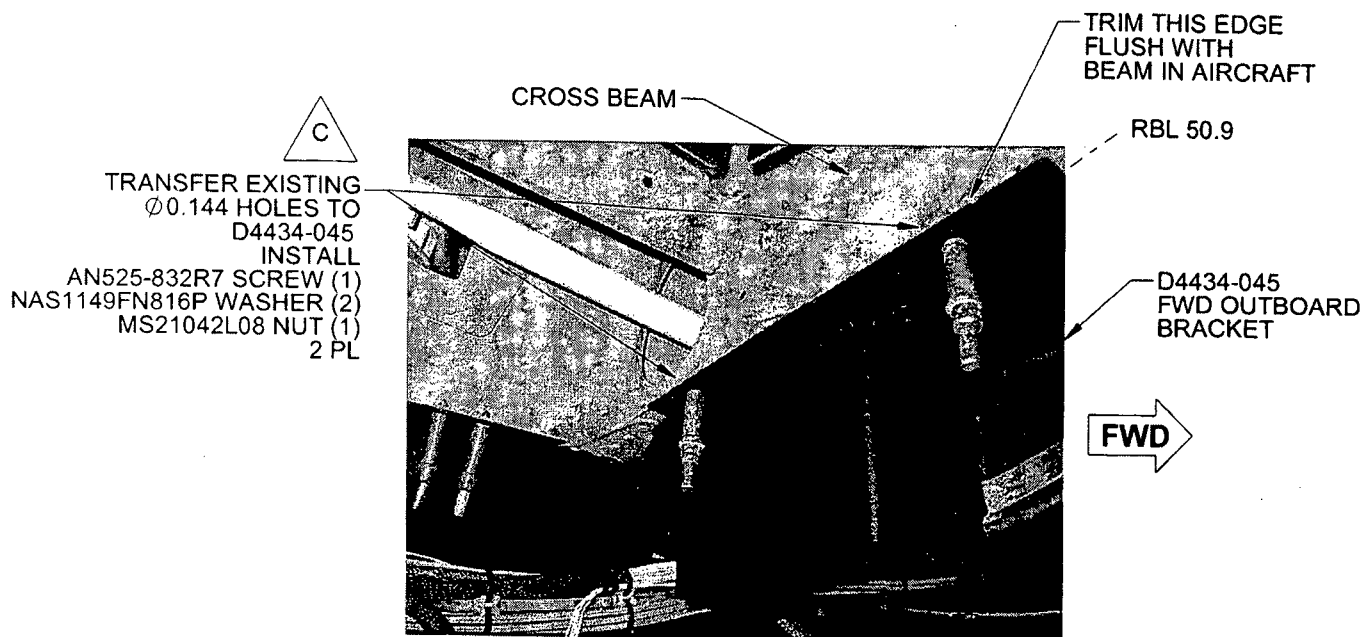


Figure 11. D4434-045 Bracket Installation

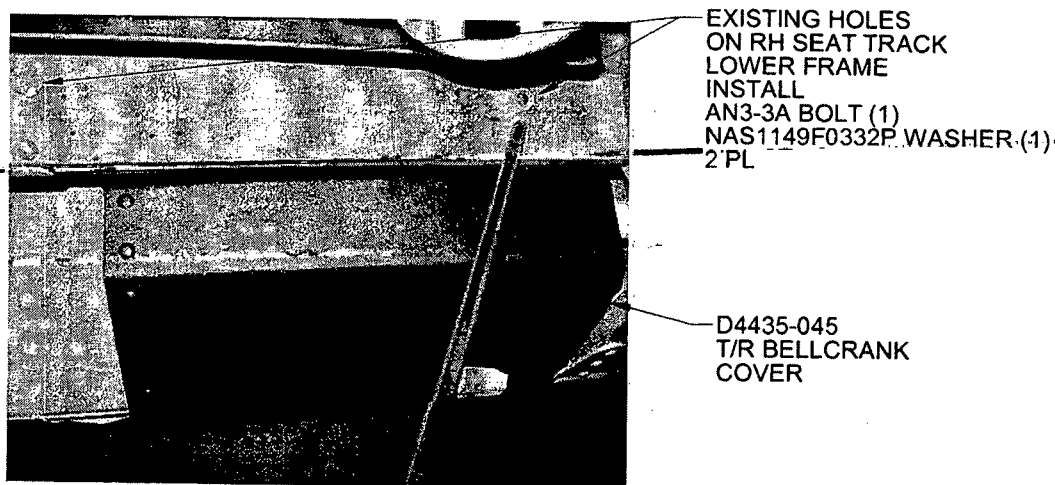


Figure 12. D4435-045 T/R Bellcrank Cover Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A	SHEET 10 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

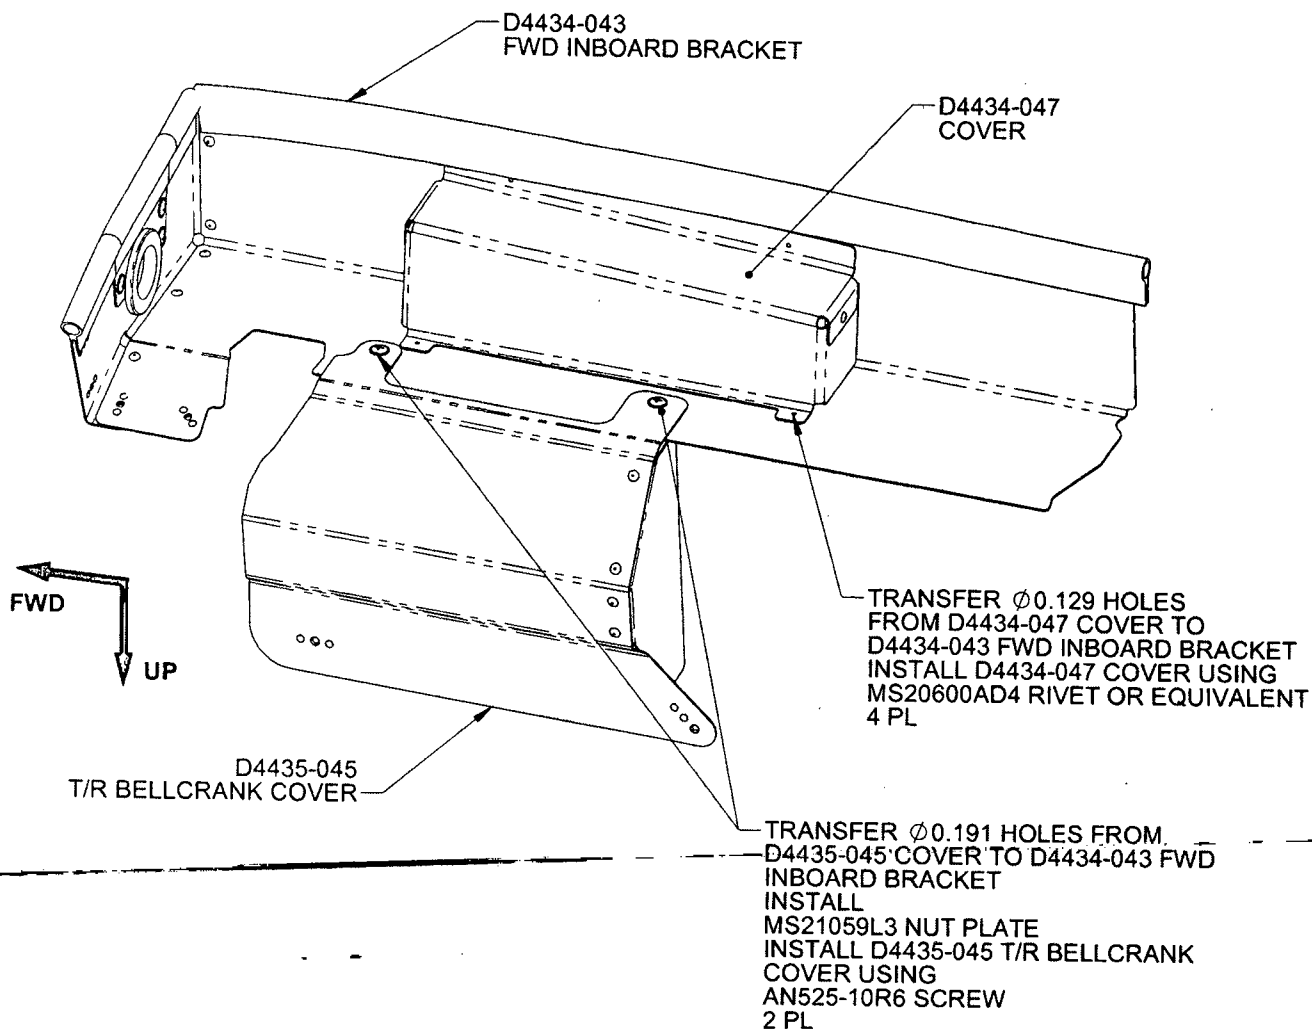


Figure 13. D4435-045 & D4434-047 Cover Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. C
MFG. APPR.	N/A	SHEET 11 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

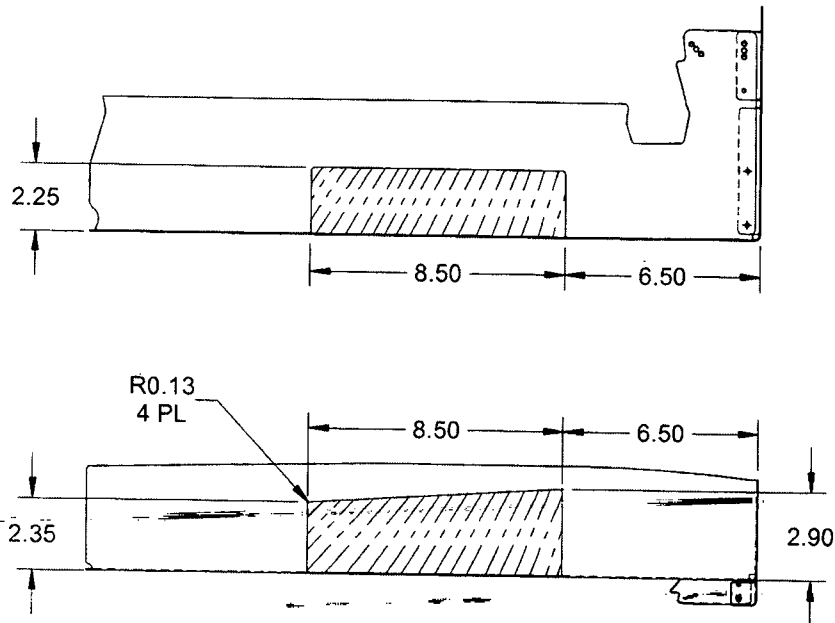
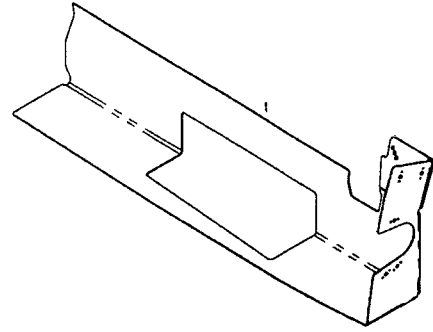


Figure 14. D4434-043 Fwd Inboard Bracket Cutout

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

101609

2.0 Part List

Skp
REFERENCE ONLY

Qty -141	Part Number	Description
X	D350-567-141	FLOOR WINDOW CLOSE-OUT KIT
1	D3802-1-024	SEAL (24")
1	D4434-041	FWD BRACKET ASSEMBLY
1	D4434-047	COVER ASSEMBLY
1	D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	D4435-9	BRACKET
2	D4436-041	AFT BRACKET ASSEMBLY
1	D4441-1-240	RUBBER SEAL (24")
1	AN3-3A	BOLT
2	AN525-832R7	SCREW
7	MS21042L06	NUT (OR MS21042-06)
2	MS21042L08	NUT (OR MS21042-08)
5	MS21042L3	NUT (OR MS21042-3)
2	MS21059L3	NUTPLATE
2	MS35206-229	SCREW
12	NAS1149F0332P	WASHER (AN960-10L)
14	NAS1149FN616P	WASHER (OR AN960-6L)
2	NAS1149FN816P	WASHER (OR AN960-8L)



3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141 Kit.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kG	1.66 m	2.94 m-kG

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141 Close-out Kit. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 — OK to remove D3295-041
 - D350-567-031 — OK to remove D3212-1
 - D350-567-011 — OK to remove D2214
 - D350-567-021 — OK to remove D2951
- It is acceptable to drill/trim the D350-567-141 Close-out Kit as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: MSB
D. SHEPHERD (DE # 02)

DATE: 12.03.13
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<u>RF</u>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 12
APPROVED	<u>RF</u>	TITLE	SCALE
DE APPR.	<u>RF</u>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

Work Order ID 101609

May-13-13 1:09:53 PM

101609

SHIP DATE
27 June
Page 1

Item ID: D350-567-141

Accept

N900040100

Setup Start *NS1*

Revision ID:

Stop *NS2*

Item Name: Floor Window Closeout Installation

Start Date: 5/13/13 Start Qty: 2.00

2

Required Date: 5/31/13 Req'd Qty: 2.00

2

Cust Item ID:

Customer:

Reference:

Approvals: Process Plan: MLS

Date: 13-05-15 Tooling:

Date:

Run Start *NR1*

QC:

Date: SPC (Y/N):

Date:

Stop *NR2*

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Tool ID Tool # Plan Accept Reject Reject Insp.
Code Qty Qty Number Stamp

Draw Nbr Revision Nbr

DSI 9590 C

JB

MLS

13-06-19

100

0.00

100

DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile & type labels per PPP D350-567-141 CHG002

2

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging

120

QC4- 100% Inspect kits for completeness

0.00

120

QC

Memo

0.00

Quality Control